

Technical Support Document

How to burn a CD on a TIBET-DVR

Please read all steps before attempting any procedure!

1.0 General Information

You can only use CDRW discs to use the CD-Writer. You can buy them pre-formatted. There are two states of a CD, completely erased, and formatted. You can use a formatted CD to put files on, with an erased CD; you can format it, and then put files on it. If you do not have a pre-formatted CD follow the format procedure, if you have a pre-formatted CD, then follow the "burn to CD" procedure. If you have any problems writing to a CD, then it is recommended that you erase, then format the CD then try again.

2.0 Format a CD.

Before you can write an image to CD you first of all must make sure it is formatted.

2.1 To Exit the Tibet software:

Click the Control button on the bottom right of the main DVR screen

Click the Setup button near the top right of the DVR screen

Untick the box "ShutDown System Power"; this is near the top of the setup screen.

Click OK, down the bottom of the screen

Click the power button on the DVR screen (using the mouse), which is on the bottom left.

Choose Exit from the small window

Click OK

Type your password, if you have one

Click OK, you will then be at the Windows Desktop

2.2 To format a CD using InCD

Click Start, down the bottom left of the screen

Click "My computer", found in the start menu

Click once on the drive [with] (E:) in its description, which also has a CD in the picture.

Click File, in the menu bar at the top

Click "InCD Format..." from the menu

Click "Format" under format disc

Click the Options button

Untick "MRW Format all drives"

Click Apply

Untick "Verify after format"

Click the "Start" button on the small window

This process may take about 10 – 20 minutes, please be patient

Click "Close" when finished

A new window will appear of the empty CD

Click the "cross" in the top right hand corner of the window to close it

Click the "cross" in the top right hand corner of the my computer window to close it

Double click the "MagicRadar DVR" icon on the desktop

2.3 To format a CD using Easy CD Creator 6

Click Start, down the bottom left of the screen

Click "My computer", found in the start menu

Click once on the drive [with] (E:) in its description, which also has a CD in the picture.

Click File, in the menu bar at the top

Click "Format..." from the menu

Click the "Quick Format" option

Click the "OK" button on the small window

This process may take about 1 – 2 minutes, please be patient

Click "Close" when finished

A new window will appear of the empty CD

Click the "cross" in the top right hand corner of the window to close it

Click the "cross" in the top right hand corner of the my computer window to close it

Double click the "MagicRadar DVR" icon on the desktop

2.4 To make the DVR shut down when powering off

Click the Control button on the bottom right of the main DVR screen

Click the Setup button near the top right of the DVR screen

Tick the box "ShutDown System Power"; this is near the top of the setup screen.

Click OK, down the bottom of the screen

3.0 To save video files on a CD

Click the Search button on the bottom right of the main DVR screen

Go to the footage you require

Please use your manual to get information on using the search functions

Click the save button just under the calendar

Select "AVI Format"

Click OK

High speed copies video to the CD as fast as the CD can take it, non-high speed copies the video in real time to the CD.

Click the Start button

Select the CD-ROM drive in "Save in"

Type an appropriate file name into the "File name" box

Click "Save"

Click "Stop" when you want the recording to stop.

Eject the CD, using the eject button on the CD-Rom drive.

4.0 To save still image files on a CD

Click the Search button on the bottom right of the main DVR screen

Go to the footage you require

Please use your manual to get information on using the search functions

Click the save button just under the calendar

Select "BMP Format"

Click OK

Click the Start button

Select the CD-ROM drive in "Save in"

Type an appropriate file name into the "File name" box

Click "Save"

Click "Stop" when you want the recording to stop

Eject the CD, using the eject button on the CD-Rom drive